

SETUP COUNT FUNCTION FOR GW- SERIES

1. Power on the scale until you are in weigh mode. Hold down the SETUP key until you see CONFIG. Press the TARE/PRESET key twice until you see RESET.
2. Once you see RESET, press the PRINT/FUNCTION key until you see FUNC. Press the TARE/PRESET key and the display will show HOLD.
3. Scroll down with the ACC/TOTAL key until you see COUNT. Press the TARE/PRESET key to enter, the display will show NO. Press the ACC/TOTAL key to scroll down and select YES. Press the TARE/PRESET key and the display will show COUNT.
4. Press the ON/OFF key and the scale will display exit. Press the ON/OFF key again and the scale will reset.
5. Once back in weigh mode press and hold the PRINT/FUNC key for 4 seconds. Use the ACC/TOTAL key to select COUNT, then press the TARE/PRESET key to confirm and enter counting mode.