

SETUP AFTER INSTALLING v.2.8 OR RAM CLEAR

1. FOR GAP AND CONTINUOUS STRIP

- a) Press 1 then Mode key.
- b) Press ↑ key twice to go to SET then press PRT key.
- c) Press 4 then press PRT (LABEL ENTER 1) key then press 5 (CLABEL)
- d) Press 0 for standard gap labels and 1 for continuous strip labels. (CLABEL IS DEFAULT TO 5 AFTER UPDATE)
- e) Press PRT key then “ C “ key.

Note: Turn Off PEELL SENSOR when using continuous strip. (page 44)

2. FOR ½ AND ¼ KEY

- a) Press 1 then Mode key.
- b) Press ↑ key once to go to INIT mode.
- c) Press PRT then enter the FF:
- d) Press 0911 for disable or 0704 for enable.
- e) Press PRT key then “ C “ key.

3. FOR SCALE TO SCALE TRANSFER

- a) Attached Cable on both sending and receiving scale.
- b) Press 2 then Mode key. (Receiving Scale)
- c) Press ↑ once (TRANS) press the PRT key.

4. Disable PASSWORD

- a) Go to CAL Mode
- b) Press 4 key then PRT key then 6 key.
- c) Press 0 to disable and 1 to enable.
- d) Press “0” key.

5. Set up desired Label Format (DEFAULT TO LST8010 LABEL)